

Single Axle 'DRAUGHT STOPPA' Fitting Instructions



1. Component parts




2. Hold the Velcro strap around the highest spoke in the wheel



3. Position the board with the fold away from the vehicle body, locate the strap through the slots



4. Secure the strap so as to flatten the fold and leave the board flush against the vehicle body

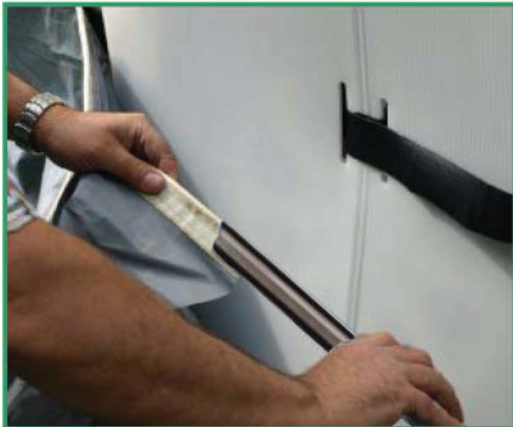

5. Thread the support bar on to the skirt



6. Position the retaining clip over the Velcro strap



7. Clip the support bar in to the retaining clip by first locating the bottom lip of the bar



8. Installation complete, removal is a reversal of these fitting instructions

NOTE - Due to the variation in caravan geometry, it may be necessary to trim excess board to attain a correct fit